

DEN-600 **Photometer**



If you have any feedback on our products or services, we would like to hear from you. Please send all feedback to:

Manufacturer:

SIA Biosan

Ratsupites iela 7 k-2, Riga, LV-1067, Latvia

Phone: +371 674 261 37 Fax: +371 674 281 01

https://biosan.lv/

Marketing: <u>marketing@biosan.lv</u> Service: <u>service@biosan.lv</u>

Contents

1.	About this edition of user instructions	3
2.	Safety precautions	4
3.	General information	5
4.	Getting started	6
5.	Operation	7
6.	Specifications	
7.	Ordering information	12
8.	Care and maintenance	12
9.	Troubleshooting errors	13
10.	Warranty. Production date	14
11.	EU Declaration of conformity	15

1. About this edition of user instructions

1.1 The current edition of the user instructions applies to the following models:

Model	Version
DEN-600 , photometer	V.2AW

1.2 Edition 2.01 – June of 2022.

2. Safety precautions



Caution!

Make sure you have fully read and understood the present Manual before using the equipment. Please pay special attention to sections marked by this symbol.

2.1 General safety

- The protection provided can be ineffective if the operation of the appliance does not comply with the manufacturer's requirements.
- Save the unit from shocks and falling.
- Store and transport the unit at ambient temperatures between -20°C and +60°C and maximum relative humidity of 80%.
- After transportation or storage and before connecting it to the electric circuit, keep the unit under room temperature for 2-3 hrs.
- Use only original parts and accessories, provided by manufacturer for this product.
- Before using any cleaning or decontamination methods except those recommended by the manufacturer, check with the manufacturer that the proposed method will not damage the equipment.
- Do not make modifications in design of the unit.

2.2 Electrical safety

- Connect only to the mains with voltage corresponding to that on the serial number label.
- Use only the external power supply provided with this product.
- Ensure that the power plug is easily accessible during use.
- Disconnect the unit from the mains before moving.
- If liquid penetrates into the unit, disconnect it from the mains and have it checked by a repair and maintenance technician.
- Do not operate the unit in premises where condensation can form. Operating conditions
 of the unit are defined in the Specifications section.

2.3 During operation

- Do not operate the unit in environments with aggressive or explosive chemical mixtures. Please contact manufacturer for possible operation of the unit in specific atmospheres.
- Do not operate the unit if it is faulty or has been installed incorrectly.
- Do not use outside laboratory rooms.

2.4 Biological safety

 The user is responsible to carry out appropriate decontamination if hazardous material spills on or penetrates into the equipment.

3. General information

DEN-600 is a compact, portable, rechargeable battery powered photometer. It comprises of 600 nm wavelength optical system, which enables to apply - 1) OD600 method that estimated total number of cells, 2) McFarland (McF) turbidity measurement method, 3) Bradford protein assay method for protein concentration measurement, 4) other methods that can be adjusted or optimized using 600 nm wavelength.

The device serves as an inexpensive alternative to a spectrophotometer, which is commonly used for these applications. Because DEN-600 is battery powered and compact, it can be comfortably located in a biosafety cabinet, anaerobic chamber or quickly moved to another lab room. Additionally, the vessel holding mechanism allows accommodating round bottom, conical vials or falcon tubes, therefore enabling to measure the absorbance (Abs) and turbidity in Abs, OD and McFarland units.

USB connectivity and DEN software allow for data transfer, data processing and calculation, software calibration for Bradford protein assay method or a custom calibration for a specifically applicable vessel.

Common applications:

- Cell concentration measurement
- Cell growth data estimation
- Log phase estimation for microbial cells induction
- Competent cell preparation
- Bradford protein assay method
- Antibiotic susceptibility testing
- Inhibitory tests

4. Getting started

- 4.1 Unpacking. Remove packing materials carefully and retain them for future shipment or storage of the unit. Examine the unit carefully for any damage incurred during transit. The warranty does not cover in-transit damage. Warranty covers only the units transported in the original package.
- 4.2 **Complete set.** Package contents:
- 4.2.1 Standard set:

-	DEN-600 pnotometer	
	External power supply	
	USB cable for connection to PC	
	PC software and instructions, on USB disk drive	
	User instructions, declaration of conformity	•

- 4.2.2 Optional accessories

 - McF calibration kit for Ø 12 mm glass tubes......on request
 - Glass sample tubes, set of 78 pcson request

4.3 **Setup**.

- Make sure that no direct overhead light enters the socket.
- Connect the external power supply unit into the socket at the rear side of the unit and position the unit for an easy access to the external power supply and the power switch.



Note. Connecting external power supply is optional when running from the builtin battery.

- Remove the protective film from the display.
- 4.4 Factory calibration. The device is pre-calibrated for McF parameter at the factory for operation with the glass tubes 16 mm in external diameter at temperature range from +15°C to +25°C and saves calibration data when being switched off. For Abs parameter, no additional calibration is required (only verification depending on laboratory internal guidelines).



Caution! Recalibrate the unit before using the tubes that are different from factory calibrated (e.g., with different outer diameter, bottom shape or different material, e.g., plastic, glass thickness). See **5.6**.

5. Operation

Recommendations during operation

- Remove the tube with the solution from the socket before switching the unit on or off.
- Keep the unit switched on for 15 minutes before starting the operation in order to stabilize it in the working mode.
- If required, agitate the reaction vessel by pipette or vortexing the reaction vessel by, e.g. Biosan pipettes or Biosan V-1 plus respectively.

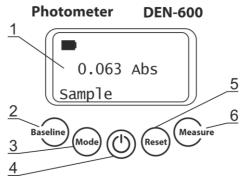


Figure 1. Control panel

5.1 Connect the external power supply to electric circuit. Switch on the unit using the green **Power** key (fig. 1/4) on the control panel.



Note. Connecting external power supply is optional when running from the built-in battery or when connected to PC.

- 5.2 The following indication may be shown on the display (fig. 1/1):
 - Battery indicator, top left corner. Animated when charging.
 - USB data transfer, bottom right corner. Appears only when connected to PC and during data transfer.
 - Two measurement modes for operation are available McFarland (McF) and Abs (Absorbance) see Figure 2 and 5.3.
 - Request for baseline calibration, see 5.3.
 - Current operation mode, see 5.4.

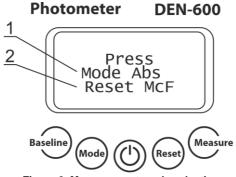


Figure 2. Measurement mode selection

- 5.3 Measurement mode selection (Figure 2). Select measurement units by pressing Reset key for McF (fig. 1/5) and Mode key for Abs (fig. 1/3).
- 5.4 **Baseline calibration**. Unit requires initial baseline (only in Abs mode), e.g., depending on the reaction vessel or suspension colour. Insert the reaction vessel with or without suspension into the unit and press the **Baseline** key (fig. 1/2).
- 5.5 **Choosing mode of operation**. Press the **Mode** key (fig. 1/3) to circle through available operation modes, **Sample**, **Save** and **Read**.
- 5.5.1 **Sample** mode measurement without saving the results. Place the sample in the unit and press the **Measure** key (fig. 1/6). Display shows the measurement result.
- 5.5.2 Save mode measurement and saving of measurement results. An indication S# appears in the top right corner, where # is a number from 0 to 999. Place the sample in the unit and press the Measure key. Display shows the measurement result and saves it to internal memory that can be uploaded to dedicated PC software (see the software manual).
- 5.5.3 Read mode view the saved measurements. An indication R0 appears in the top right corner, and the corresponding value in the middle of the display. Press the Measure key to see the next saved measurement value. Press the Reset key to move back to the previously saved value (R0).

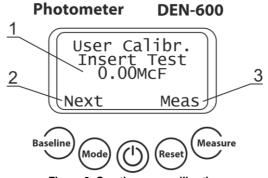


Figure 3. Creating user calibration

- 5.6 **Creating McF user calibration** (Figure 3).
- 5.6.1 The device is pre-calibrated at the factory for operation with the glass tubes 16 mm (or other if separately requested) in external diameter at temperature range from +15°C to +25°C and saves calibration data when being switched off.
- 5.6.2 The standard suspensions must be sufficiently resuspended before measurement. To do this, proceed as follows:
 - Mix adequately at the highest RPM setting of your vortex mixer device, i.e. Biosan V-1 plus.
 - Invert the tubes carefully before comparison. Avoid bubble formation during operation.
 - Additionally, McF standards preparation/mixing before measurement can vary from different manufacturers, we advise to follow those requirements thoroughly to achieve the best results.
- 5.6.3 Perform calibration from lower to higher calibration value. Use at least 2 points for calibration. Different calibration points are available 0.00, 0.50, 1.00, 2.00, 3.00, 4.00, 5.00, 6.00, 7.00, 8.00, 9.00, 10.00, 11.00, 12.00, 13.00, 14.00, 15.00, 16.00.

- 5.6.4 Minimum requirement is 5 points closest to the working range limits (e.g. 0.00 and 6.00 for operation in 0.00 6.00 McF range). The best results are obtained when maximum amount of calibration points for the required range are used.
- 5.6.5 If the standard for 0.00 value is not available, fill the tube (of the kind that is used for operations) with distilled water. Use the tube as the 0.00 value standard.
- 5.6.6 Press **Baseline** key 5 times in McF mode to enter user calibration regime (Figure 3).
- 5.6.7 Insert the required McF standard (fig. 3/1) into the socket and press Meas (**Measure** key). If the required standard is not available press Next (**Baseline** key) to skip to the next standard.
- 5.6.8 To finish calibration process, press Next (**Baseline** key) skipping all the not required calibration points, when asked to save user calibration or not, press **Measure** key for Yes and **Baseline** key for No.

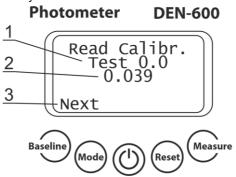


Figure 4. Saved user calibration data

5.7 **Saved user calibration data observation (Figure 4**). Press **Mode** key in user calibration regime, then press Next (**Baseline** key) to observe calibrated points and Abs result equivalent to McF in user calibration.

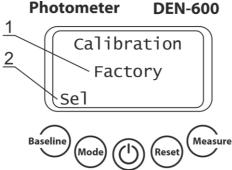


Figure 5. User and factory calibration selection

5.7.1 Restoring to McF factory calibration settings (Figure 5). Enter user calibration regime by pressing Baseline key 5 times in McF measurement mode, press Mode key 2 times, then select between User and Factory calibration settings by pressing Sel (Baseline key, fig. 5/2), to exit the menu press Reset key.

- 5.8 Resetting the memory. In the Save mode, press the Reset key twice to delete all saved values from the memory.
- 5.9 To control the unit from a PC, please see the software manual.

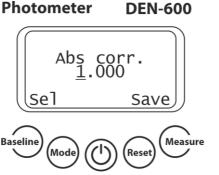


Figure 6. Abs correction coefficient setting window

- 5.10 Abs correction coefficient (Figure 6).
- 5.10.1 OD600 value can vary when results of different photometers are compared since every instrument can have a different optical set up that affects turbidity measurement results. Abs correction coefficient is used to proportionally adjust Abs measurement data. When Abs correction is active, the calculations are as follows:

$$Abs_{LCD} = Abs_{meas} \cdot k_{corr.coef.}$$

- 5.10.2 Enter Abs correction regime by pressing and holding **Mode** and **Reset** keys for 5 seconds simultaneously. Press **Baseline** key to select the digit position, use **Mode** key to increment the number. Press **Measure** key twice to save the correction coefficient. To reset the coefficient, return the value to 1.000.
- 5.11 After finishing the operation, switch off the unit using the green **Power** key. If the external power supply is used, disconnect it from electric circuit.

6. Specifications

The unit is designed for operation in cold rooms, incubators (except CO_2 incubators) and closed laboratory rooms at ambient temperature from +4°C to +40°C in a non-condensing atmosphere and maximum relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.

For optimum performance, photometer DEN-600 should be sited in a clean, dry, dust free atmosphere. When in use, ambient temperature, relative humidity and light levels should remain as constant as possible. In order to perform a measurement under the most stable condition and to conform to measurement specification, the instrument must be used in an airconditioned room at 20–25°C and non-condensing atmosphere of 30–70% humidity.

Manufacturer is committed to a continuous programme of improvement and reserves the right to alter design and specifications of the equipment without additional notice.

6.1 Measurement specifications

Light source	LED	
Wavelength (λ), nm	600 ± 10	
Photodetector	Silicon photodiode	
Vessel types	Cuvettes, round bottom tubes, falcon tubes	
Measurement mode	Absorbance, Abs	McFarland, McF
Measurement range	0 – 3.000	0.00 - 16.00
Resolution	0.001	0.01
Accuracy	± 0.006 @ 1 Abs	± 0.1 @ 0-8 McF
Repeatability	± 0.003 @ 1 Abs	± 0.05 @ 0-8 McF

6.2 General specifications

Battery type	lithium-ion polymer battery (LiPo)
Display	LCD
PC system requirements	Intel/AMD Processor, 1 GB RAM, Windows Vista/7/8, USB
Weight, accurate within ±10%	0.5 kg
Dimensions (W×D×H)	120 × 145 × 65 mm
Operating voltage	12 V=
Power consumption	2.5 W
External power supply	Input 100-240 V~, 50/60 Hz, Output 12 V=

7. Ordering information

7.1 Models and versions available:

Model	Version
DEN-600	V.1AW

7.2 To inquire about or order the optional accessories, contact Biosan or your local Biosan representative.

7.2.1 Optional accessories:

Description	Catalogue number
Verification set for Abs. Certified reference material, neutral density glass filter set of 4 Abs reference points - 0.3532, 1,0512, 2,0425, 2,927 (the values may vary slightly from batch to batch)	BS-050109-AK
CKG16 , calibration kit for glass tubes 16 mm in diameter. Latex particles. Set of 0.5, 1.0, 2.0, 3.0, 4.0 McF turbidity standards	BS-050102-BK
Calibration kit for glass tubes 12 mm in diameter. Polymer particles. Set of 0.0, 0.5, 2.0, 3.0 McF turbidity standards	On request
Glass sample tubes, set of 78 pcs. Outer diameter 16 mm, height 100 mm, wall thickness 0.8 mm	BS-050102-LK

8. Care and maintenance

8.1 Service.

- 8.1.1 If the unit is disabled (e.g., LED not working, no reaction on key and switch presses, etc.) or requires maintenance, disconnect the unit from the mains and contact Biosan or your local Biosan representative.
- 8.1.2 All maintenance and repair operations (except listed below) must be performed only by qualified and specially trained personnel.
- 8.1.3 Operating integrity check. If the unit follow the procedure described in section **Operation**, then no additional checks are required.
- 8.2 Cleaning and disinfection.
- 8.2.1 Use mild soap and water with a soft cloth or sponge for cleaning the unit. Rinse remaining washing solution with distilled water. Wipe dry the excess water with clean, soft cloth or sponge.
- 8.2.2 To disinfect the unit, use a DNA/RNA removing solution (e.g., Biosan PDS-250). After disinfecting, wipe the surfaces dry.
- 8.2.3 Do not use liquids to clean optical parts. Use air from a rubber siphon to blow away any particles.
- 8.2.4 The unit and its accessories are not autoclavable.

9. Troubleshooting errors

Problem	Cause	Solution
	No mains/power connection or failure	Check the mains/power connection
Device not working	External power supply ca- bles are not fully connected	Check the external power supply's cables
	Low battery	Check battery charge
	Influence of direct ambient light on the measurement chamber	Eliminate influence of direct ambient light, remeasure baseline
Measurement result is not as expected	Sedimentation	Mix sample thoroughly before measurement
	The cuvette is not positioned correctly	Cuvette's optical window must be on the optical axis of the unit
McF measurement re-	Non-repetitive positioning of the tube	Tube positioning in the chamber must be as close as possible to the previous (add a mark on the tube for better alignment)
sults of the same sample	Scratches on the tube	Switch to unscratched samples
significantly vary	Sedimentation	Mix the sample thoroughly be- fore measurement
	Reagent is past its shelf life	Ensure that the reagent is still within its shelf life
OD600 results of cell suspensions do not com- pare to another instru- ment	Scattered light measure- ment variability due to differ- ence in optical configuration of instruments in compari- son	Calculate a conversion factor or create a standard curve to correlate to other device's OD600 relationship to specific culture
Unit does not connect to PC using provided USB	No USB drivers installed	Install USB drivers provided on the flash drive
cable	Old USB port	USB 2.0 or higher is required

10. Warranty. Production date

- 10.1 The Manufacturer guarantees the compliance of the unit with the requirements of Specifications, provided the Customer follows the operation, storage and transportation instructions.
- 10.2 The warranted service life of the unit from the date of its delivery to the Customer is 24 months. For extended warranty, see **10.5**.
- 10.3 Warranty covers only the units transported in the original package.
- 10.4 If any manufacturing defects are discovered by the Customer, an unsatisfactory equipment report shall be compiled, certified and sent to the local distributor address. To obtain the claim form, visit **Technical support** page on our website at link below.
- 10.5 Extended warranty. For **DEN-600**, the *Smart* class model, extended warranty is a paid service. Contact your local Biosan representative or our service department through the **Technical support** section on our website at the link below.
- 10.6 Description of the classes of our products is available in the **Product class description** section on our website at the link below.



10.7 The following information will be required in the event that warranty or post-warranty service comes necessary. Complete the table below and retain for your records.

Model	Serial number	Date of sale
DEN-600 , photometer		

10.8 **Production date**. Production date is placed in the serial number, on the label of the unit. Serial number consists of 14 digits styled XXXXXXYYMMZZZZ, where XXXXXX is model code. YY and MM – year and month of production. ZZZZ – unit number.

11. EU Declaration of conformity

11.1 Photometer **DEN-600** is in conformity with the following relevant Union legislations:

LVD 2014/35/EU	LVS EN 61010-1:2011 Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements.
EMC 2014/30/EU	LVS EN 61326-1:2013 Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements.
RoHS3 2015/863/EU	Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
WEEE 2012/19/EU	Directive on waste electrical and electronic equipment.

11.2 Declaration of Conformity is available for download on the page for the relevant model on our website by links below, in the **Downloads** section:



DEN-600

Biosan SIA

Ratsupites 7 k-2, Riga, LV-1067, Latvia Phone: +371 67426137 Fax: +371 67428101

https://biosan.lv